
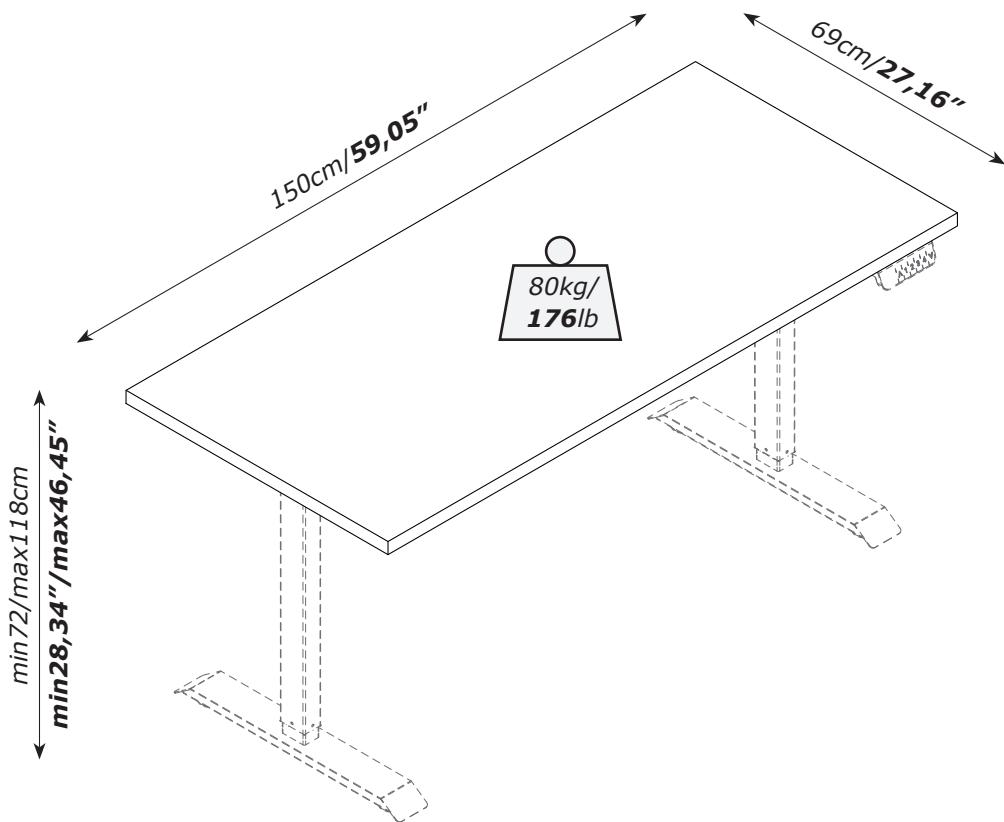


# TPA130B

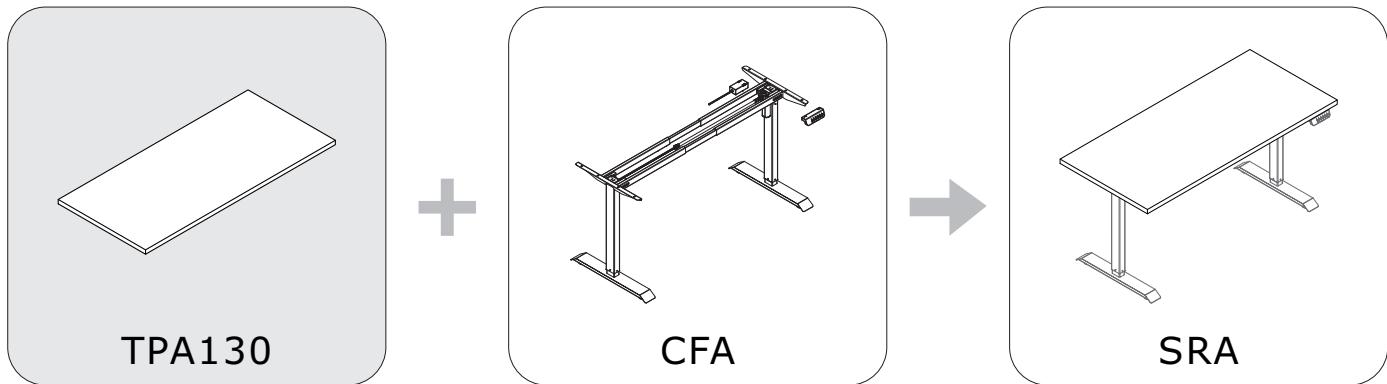





<https://quefairedemesdechets.fr>

QF06504-A

 **composad**



 MADE IN ITALY  
Produced by COMPOSAD srl, Via Lombardia 29, 46019 Viadana (MN) ITALY

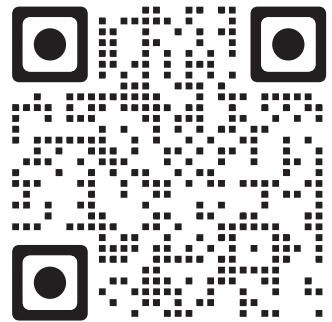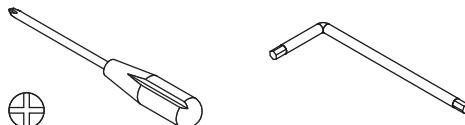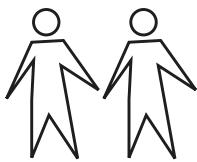

150x69x3 cm  
59,05" x 27,16" x 1,18"

|              | COD.    | COLORE / COLOR / COULEUR / FARBE / COLOR  |
|--------------|---------|---|
| TPA130B51104 | CA04157 | <b>IT:</b> ROVERE SONOMA TARTUFO / <b>GB:</b> SONOMA TRUFFLE OAK / <b>FR:</b> CHÊNE SONOMA TRUFFÉ / <b>DE:</b> SONOMA OAK TRÜFFEL / <b>ES:</b> TRUFA DE ROBLE DE SONOMA           |
| TPA130B56204 | CA04158 | <b>IT:</b> GRIGIO CEMENTO / <b>GB:</b> CONCRETE / <b>FR:</b> BÉTON / <b>DE:</b> BETON / <b>ES:</b> CONCRETO   |
| TPA130B76504 | CA04159 | <b>IT:</b> ROVERE NATURALE / <b>GB:</b> NATURAL OAK / <b>FR:</b> CHÊNE NATUREL / <b>DE:</b> NATUERLICHE EICHE / <b>ES:</b> ROBLE NATURAL  |
| TPA130B80304 | CA04160 | <b>IT:</b> NOCE SCURO / <b>GB:</b> DARK WALNUT / <b>FR:</b> NOYER FONCÉ / <b>DE:</b> DUNKLE WALNUSS / <b>ES:</b> NOGAL OSCURO   |
| TPA130B76804 | CA04161 | <b>IT:</b> BIANCO LACCATO LUCIDO / <b>GB:</b> GLOSSY LACQUERED WHITE / <b>FR:</b> BLANC LAQUÉ BRILLANT / <b>DE:</b> GLAENZEND WEISS LACKIERT / <b>ES:</b> LACADO BLANCO BRILLANTE |



# INSTRUCTIONS


To reduce the risk of death, serious injury or property damage, please read and follow the safety information and provided instructions when assembling this product. Do not change or replace the components and accessories provided.



## ATTENTION


1. For indoor use only.
2. You are advised to wear protective gloves when assembling the desk.
3. Do not fully tighten bolts until you have completed assembly.
4. It is highly recommended that you assemble the desk on a carpeted floor surface so as to prevent scratches.
5. It is highly recommended that you adjust the desk to its lowest height before moving.
6. Before lifting the desk, check if surroundings are clear and make sure desk power cord is able to move freely as the desk moves up and down.
7. Do not spray cleaning solutions directly onto table system, clean only with a dry or slightly damp cloth.
8. Do not open electrical components.
9. Keep all electrical components away from water and high humidity.
10. Do not modify the plug provided with the product.
11. To disconnect, turn off all the power supply before removing the adapter from the outlet.
12. Check the desk parts on a monthly basis to ensure they are still functioning correctly.
13. Children are forbidden to play on the product because of unforeseen action when playing, so many dangerous consequences caused by this improper action will not be on manufacturers.
14. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.

## PART LIST

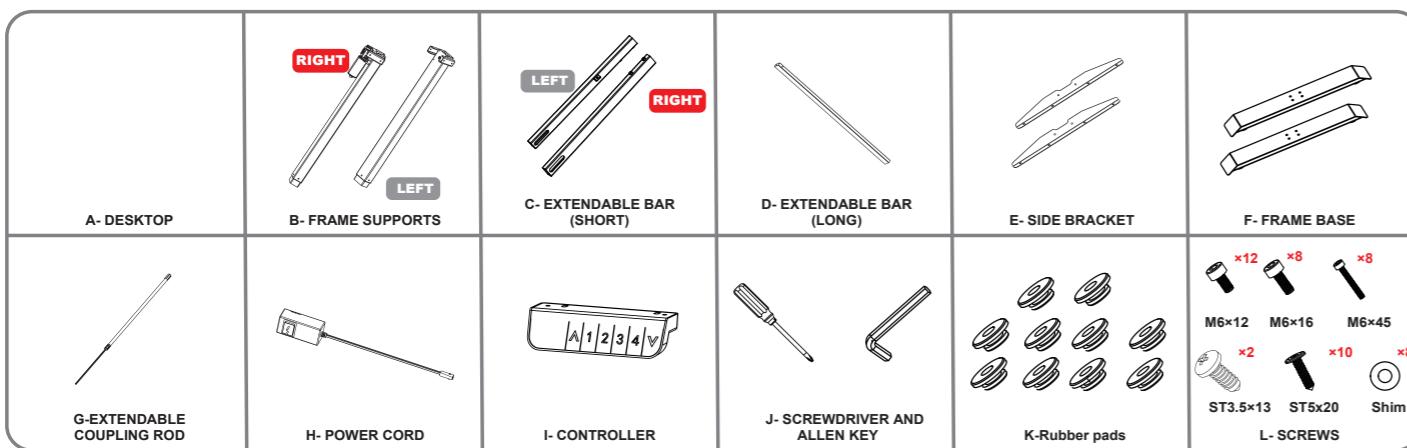


## INSTALLATION



1. Insert the extendable bar (long) to 2 extendable bars (short).
2. Do not fix them with screws before completing the frame assembly.

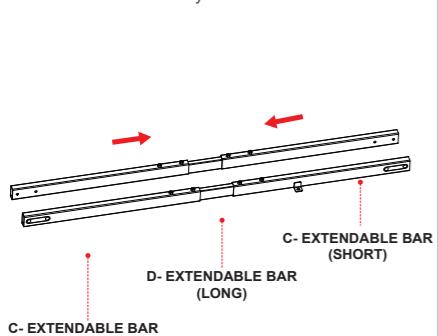


2. Install the frame supports (left & right) to the extendable bar (finished in step 1) with 8 pcs M6x16mm screws. (5mm Allen Key)

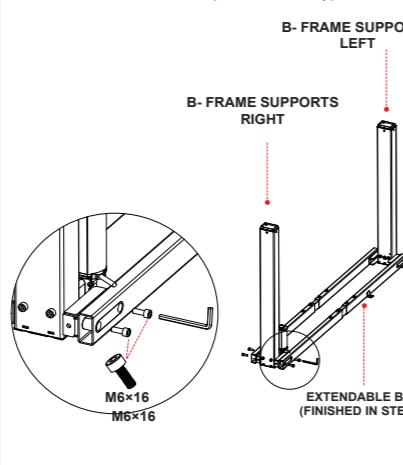


3. Install the side bracket to the frame with 4 pcs M6x12mm screws. (5mm Allen Key)

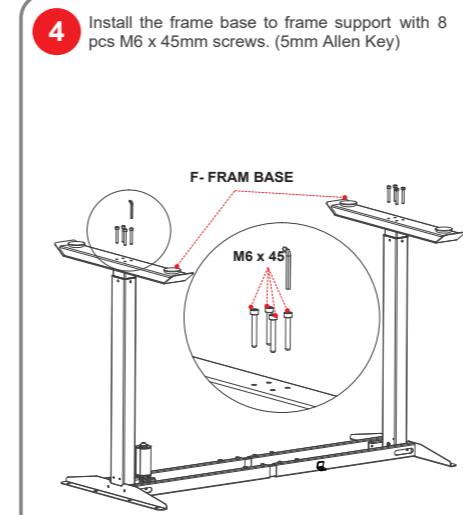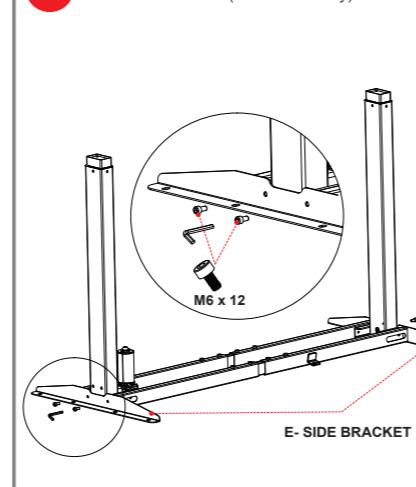


4. Install the frame base to frame support with 8 pcs M6 x 45mm screws. (5mm Allen Key)

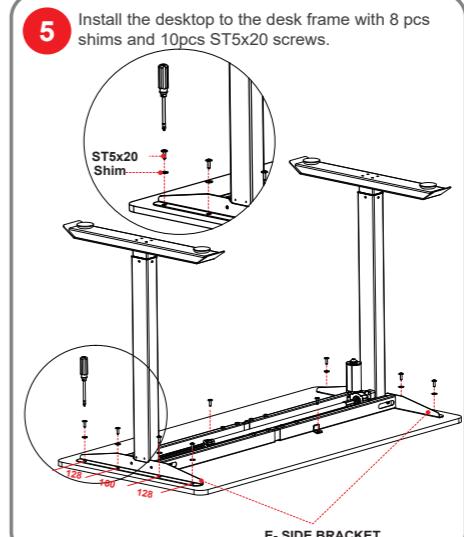


5. Install the desktop to the desk frame with 8 pcs shims and 10pcs ST5x20 screws.

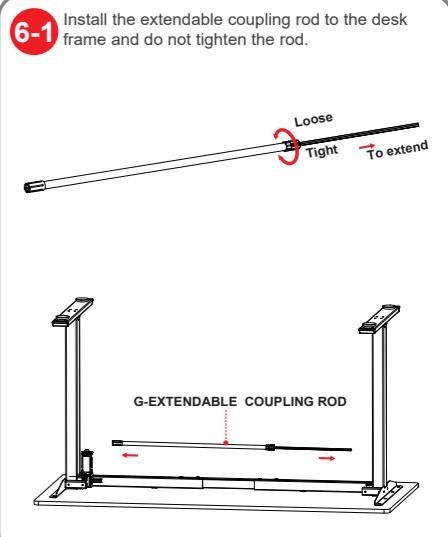


- 6-1. Install the extendable coupling rod to the desk frame and do not tighten the rod.

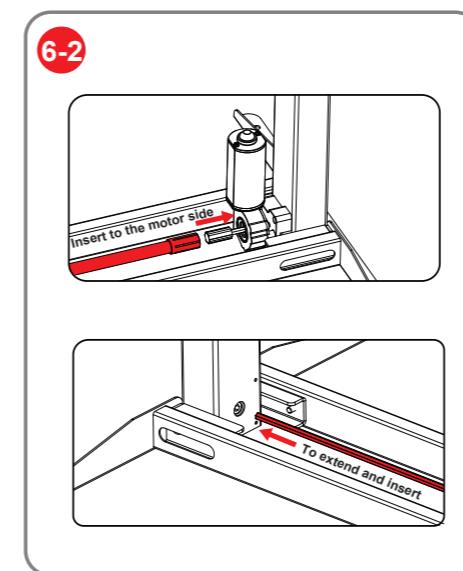

- 6-2

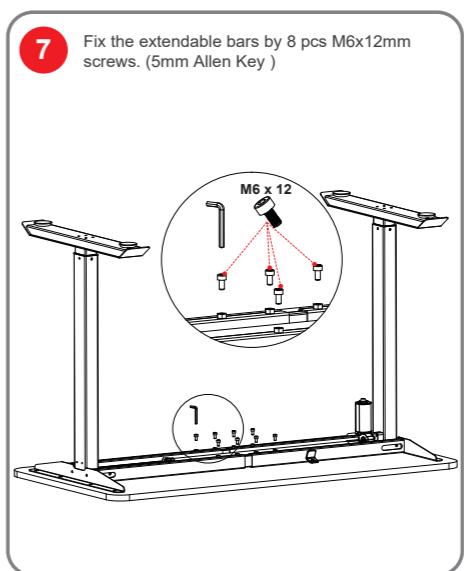


7. Fix the extendable bars by 8 pcs M6x12mm screws. (5mm Allen Key )

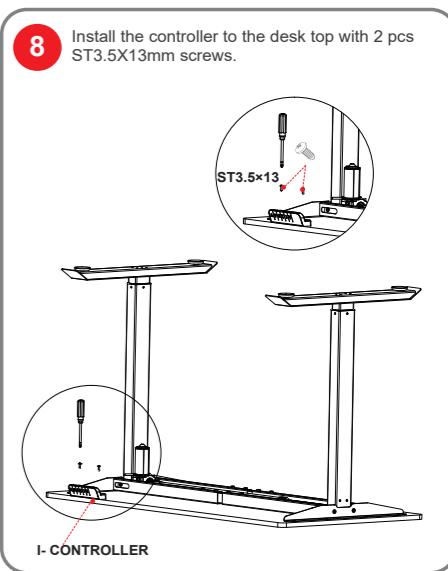

8. Install the controller to the desk top with 2 pcs ST3.5X13mm screws.

## USE AND MAINTENANCE MANUAL

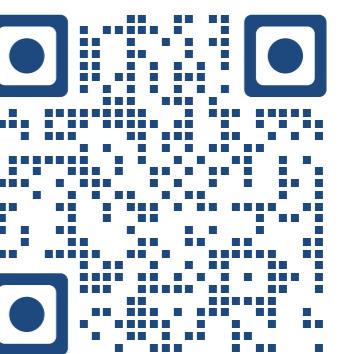

# INSTRUCTIONS

To reduce the risk of death, serious injury or property damage, please read and follow the safety information and provided instructions when assembling this product. Do not change or replace the components and accessories provided.

## CONTROLLER INSTRUCTIONS



|                          |  |
|--------------------------|--|
| <b>Reset Setting</b>     | Press "V" and "A" buttons together on the controller for 4 seconds, it will show "000", until you hear the beep release the buttons. The desk will automatically go down slowly. (It will have a rebound and rise about 5 mm/0.2in) until it shows "69" and when you hear the beep, the reset is successful.   |
| <b>Height Adjustment</b> | Up: Press "A" button.<br>Down: Press "V" button.   |
| <b>Switch Display</b>    | Press 2 times "V" when the desk is at the lowest position to switch cm to inch.  |
| <b>Memory Height</b>     | Press and hold any of memory buttons (1,2,3 or 4) until you hear a beep. Release the button, and this position height will be stored in memory. When the working height of memory needs to be used, press the memory position button and the desk will automatically adjust to the memory height.<br><b>Note:</b> This standing desk has 4 different height memories. The memory positions stored are still valid after power off. You can use the up and down buttons to adjust the standing desk to the height you need to work. |

## PARAMETER INSTRUCTION

### Electric Control Part:

Input Voltage: 100-240V AC 50/60Hz 2A

Duty cycle: 10% MAX 2 min on 18 min off

### Desk Frame Part:

Dynamic load: 80kg/ 176.4lb

The maximum static load: 120kg/ 264.6lb

Load speed: 20mm/s (0.79 in/s)

Lift range: 690mm ~1150mm/ 27.2in ~ 45.3in

The length of the adjusting range: 1100mm ~1350mm/ 43.3in ~ 53.1in

### Other Part:

Packing Size: 760mm×380mm×140mm/ 29.9in×15.0in×5.5in

Gross Weight: 18.5KG/40.8lb

## COMMON FAULT TREATMENT

| CODE       | DESCRIPTION                        | METHOD   |
|------------|------------------------------------|--|
| <b>E02</b> | Motor overcurrent                  | Press "V" or "A" button again, if it still persist, please replace the motor or reduce the load        |
| <b>E03</b> | Motor Hall failure                 | Press "V" or "A" button again, if it still persist, please check the connection or replace the motor   |
| <b>E04</b> | The main power supply is abnormal  | After power off, if it can not be eliminated, please replace the power supply                          |
| <b>E05</b> | Motor current is abnormal          | After power off, if it can not be eliminated, please contact with your supplier or dealer              |
| <b>E06</b> | Motor power device is damaged      | After power off, if it can not be eliminated, please contact with your supplier or dealer              |
| <b>E09</b> | Motor stalled                      | Press "V" or "A" button again, if it still persist, please replace the motor or reduce the load        |
| <b>E10</b> | Anti-pinch triggering              |  |
| <b>Hot</b> | The motor is working too long time | 1- Wait 18 mins, the code will disappear automatically<br>2- Unplug the power supply and power back on |
| <b>RST</b> | Illegal power off                  | Reset the program  |

### Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes according to your local rules. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

